


FUEL

Ref. No.	Part Number	Description	Qty	Remarks
1	6E5-24304-10-00	FUEL PIPE JOINT COMP. 1 ...	1	
2	97095-06028-00	BOLT	1	
3	6G5-24313-01-00	PIPE 3	1	
4	90465-11M10-00	CLAMP	2	
5	61A-24560-02-00	FILTER ASSEMBLY	1	
6	61A-24521-00-00	. CUP, FILTER	1	
7	61A-24531-00-00	. NUT	1	
8	61A-24564-00-00	. GASKET	1	
9	61A-24577-01-00	. SPRING	1	
10	61A-24563-00-00	. ELEMENT, FILTER	1	
11	61A-24469-00-00	. FLOAT, WATER LEVEL	1	
12	61U-24566-00-00	BRACKET, FILTER	1	
13	97095-06014-00	BOLT	2	
14	92990-06600-00	WASHER, PLATE	2	
15	97095-06016-00	BOLT	2	
16	92990-06600-00	WASHER, PLATE	2	
17	6G5-24314-10-00	PIPE 4	1	
18	90465-11M10-00	CLAMP	1	
19	90465-11M10-00	CLAMP	1	
20	6E5-24378-00-00	PIPE, JOINT 4	1	
21	6G5-24315-00-00	PIPE 5	1	
22	6E5-24315-00-00	PIPE 5	1	
23	90465-11M10-00	CLAMP	4	
24	6E5-24410-03-00	FUEL PUMP ASSEMBLY	2	
25	98580-05035-00	. SCREW, PAN HEAD	3	
26	92990-05600-00	. WASHER, PLATE	3	
27	6E5-24413-00-00	. BODY 2	1	
28	6E5-24471-00-00	. DIAPHRAGM	1	
29	6E5-24435-00-00	. GASKET, BODY 2	1	

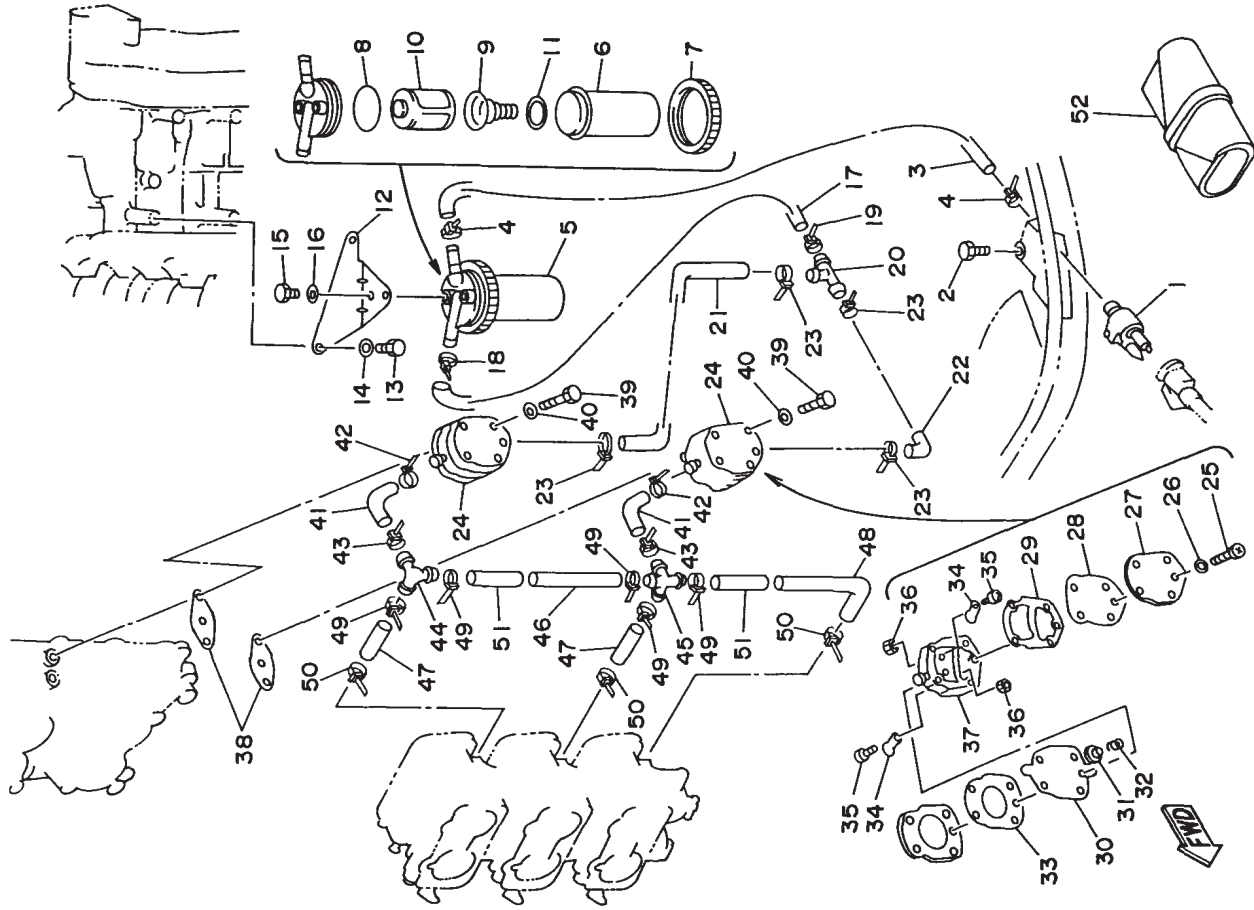

CONTINUED ON NEXT FRAME ►

FUEL

Ref. No.	Part Number	Description	Qty	Remarks
30	6E5-24411-00-00	. DIAPHRAGM	1	
31	648-24424-00-00	. SEAT, SPRING	1	
32	6E5-24423-00-00	. SPRING, DIAPHRAGM	1	
33	6E5-24434-02-00	. GASKET, BODY	1	
34	6A0-24421-01-00	. VALVE, CHECK	4	
35	6A0-14325-00-00	. SCREW, PAN HEAD	4	
36	95380-03600-00	. NUT	4	
37	6E5-24412-02-00	. BODY 1	1	
38	650-24431-A0-00	GASKET, FUEL PUMP 1	2	
39	97095-06050-00	BOLT	4	
40	92990-06600-00	WASHER, PLATE	4	
41	6G5-24316-10-00	PIPE 6	2	
42	90465-11M10-00	CLAMP	2	
43	90465-11M10-00	CLAMP	2	
44	6G5-24376-00-00	PIPE, JOINT 1	1	
45	6G5-24377-00-00	PIPE, JOINT 3	1	
46	6G5-24317-01-00	PIPE 7	1	
47	6G5-24318-10-00	PIPE, OVERFLOW	2	
48	6G5-24319-10-00	PIPE, OIL	1	
49	90465-11M10-00	CLAMP	5	
50	90465-11M10-00	CLAMP	3	
51	90446-15M07-00	HOSE	2	
52	656-W2810-02-00	TOOL KIT	1	

